

Glenview Public Library ROKU Quick Start Guide



If you have an HDMI port on your TV, connect the **HDMI Cable** to the **Roku Device** and your TV. If your TV doesn't have an HDMI port, connect the **Composite Cable** to the **Roku Device** and your TV.

Use the included **Power Adapter** to connect the **Roku Device** to a wall outlet (for best performance) or connect the included **USB cable** to the USB port on your TV.

Power on the TV, set the HDMI input (or A/V input) to **Roku Device** and press the HOME button on the ROKU remote. Look for the **ROKU** logo on your screen.

If the Roku doesn't find your Wi-Fi network, use the **Roku Remote** to scroll down to **Settings** on the Home page. Scroll right to **Network** ⇒ **Wireless** ⇒ **Set Up New Wireless Connection**. Click **OK** on the remote. Select your **Wi-fi network** and connect (you may need to put in your Wi-fi password).

Scroll left to return to the **Roku homepage**. Select the **VUDU** or **Netflix** app and begin watching movies. Enjoy!

Roku Get Started Guide: http://wwwimg.roku.com/static/oldlib/roku_player_documents/roku-lt-qsg.pdf